




Where to place Flair Smart Vents?

There are three main scenarios that are solved with Flair Smart Vents: rooms with: **too much airflow**, rooms with **too little airflow**, or wanting to create **even temperatures across the home**.



Too Much Airflow

This room gets too cold in the summer and too hot in the winter. Start off with a Puck and a Smart Vent **just for this room**.

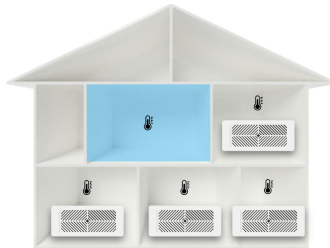

Too Little Airflow

This room gets too hot in the summer and too cold in the winter. Place a Puck in this room, and then place Pucks and Smart Vents **in the other rooms**.



Uneven Temperatures

Place Pucks and Smart Vents **in every room in your home** to redistribute air more evenly.



Temperature-reading device

Can be a Flair Puck, ecobee/Honeywell Remote Sensor, or a compatible smart thermostat. **At least one Flair Puck is required for every home.**